



# STANDARD FRAMING DETAIL

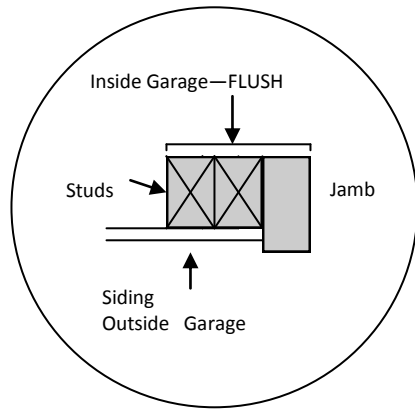

**BACK ROOM**  
From door to first  
obstruction—ie  
beam, air duct, etc.

2x6 wood anchor pads— at center of door opening and on either side should extend 18" above finished door opening height— if there is less than 18" they should extend from floor to ceiling. Pads must be securely fastened—they may support as much as 1000lbs depending on the door.

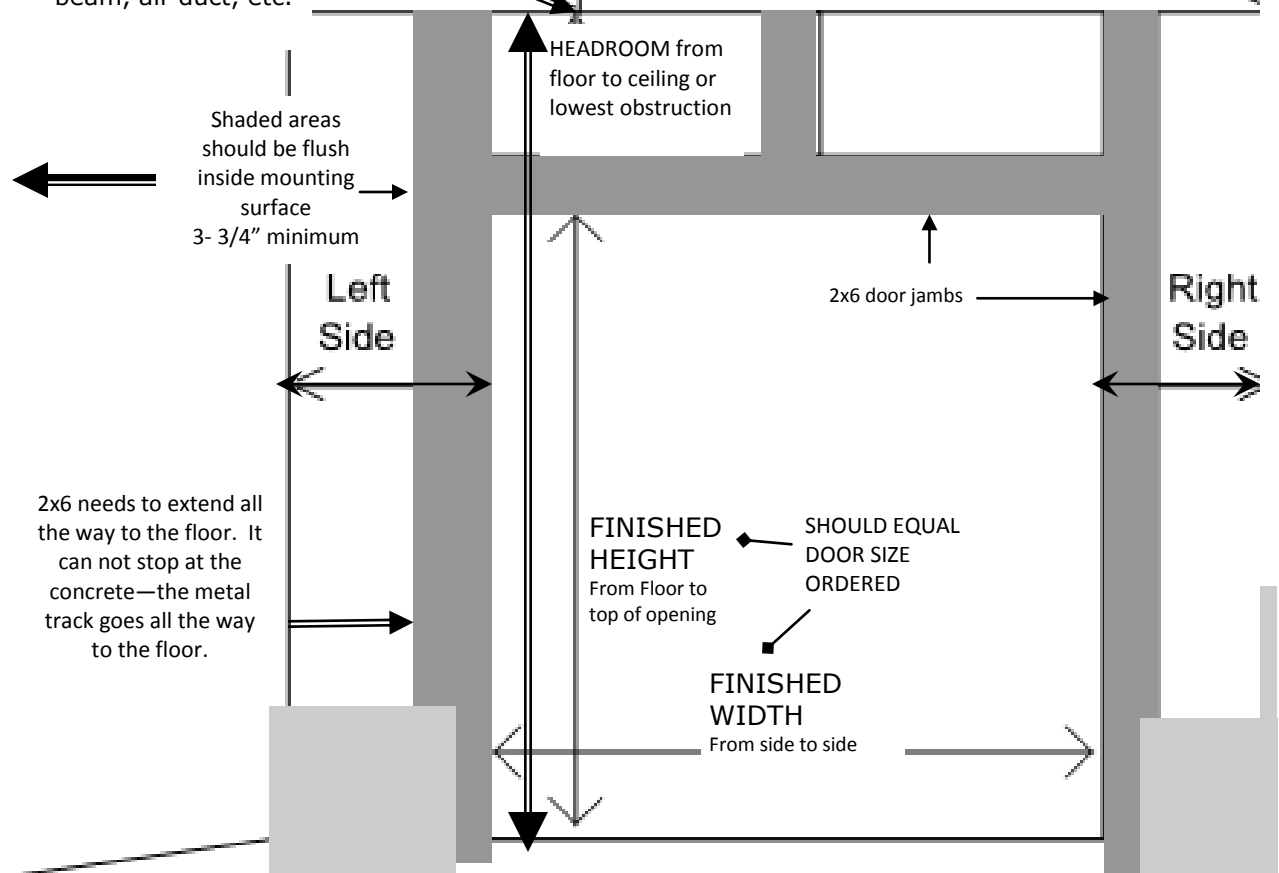

2x6 needs to extend all the way to the floor. It can not stop at the concrete—the metal track goes all the way to the floor.

FRAMING SHOULD BE SQUARE; FLOOR LEVEL/HEADER LEVEL; MINIMUM OF 2in AT BOTTOM (6in AT TOP) OF DOOR ON EITHER SIDE NEEDED—IF STEM WALL IS CLOSER CEMENT WILL NEED TO BE CHIPPED AWAY